




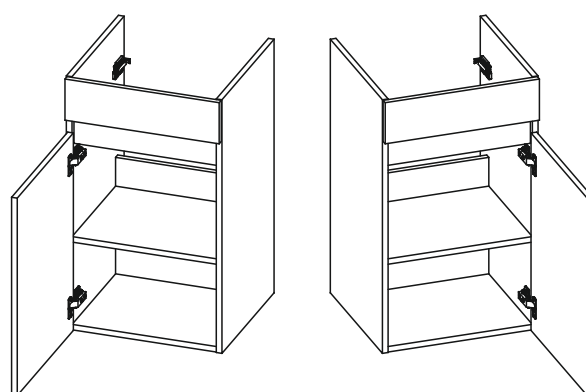
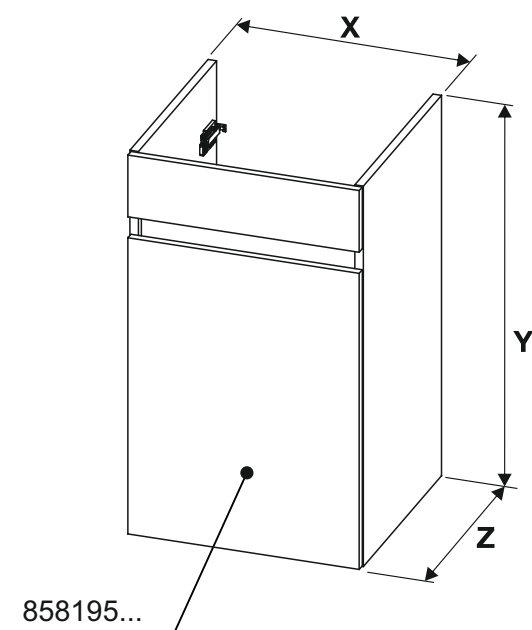


Roca

CUBE BASIC

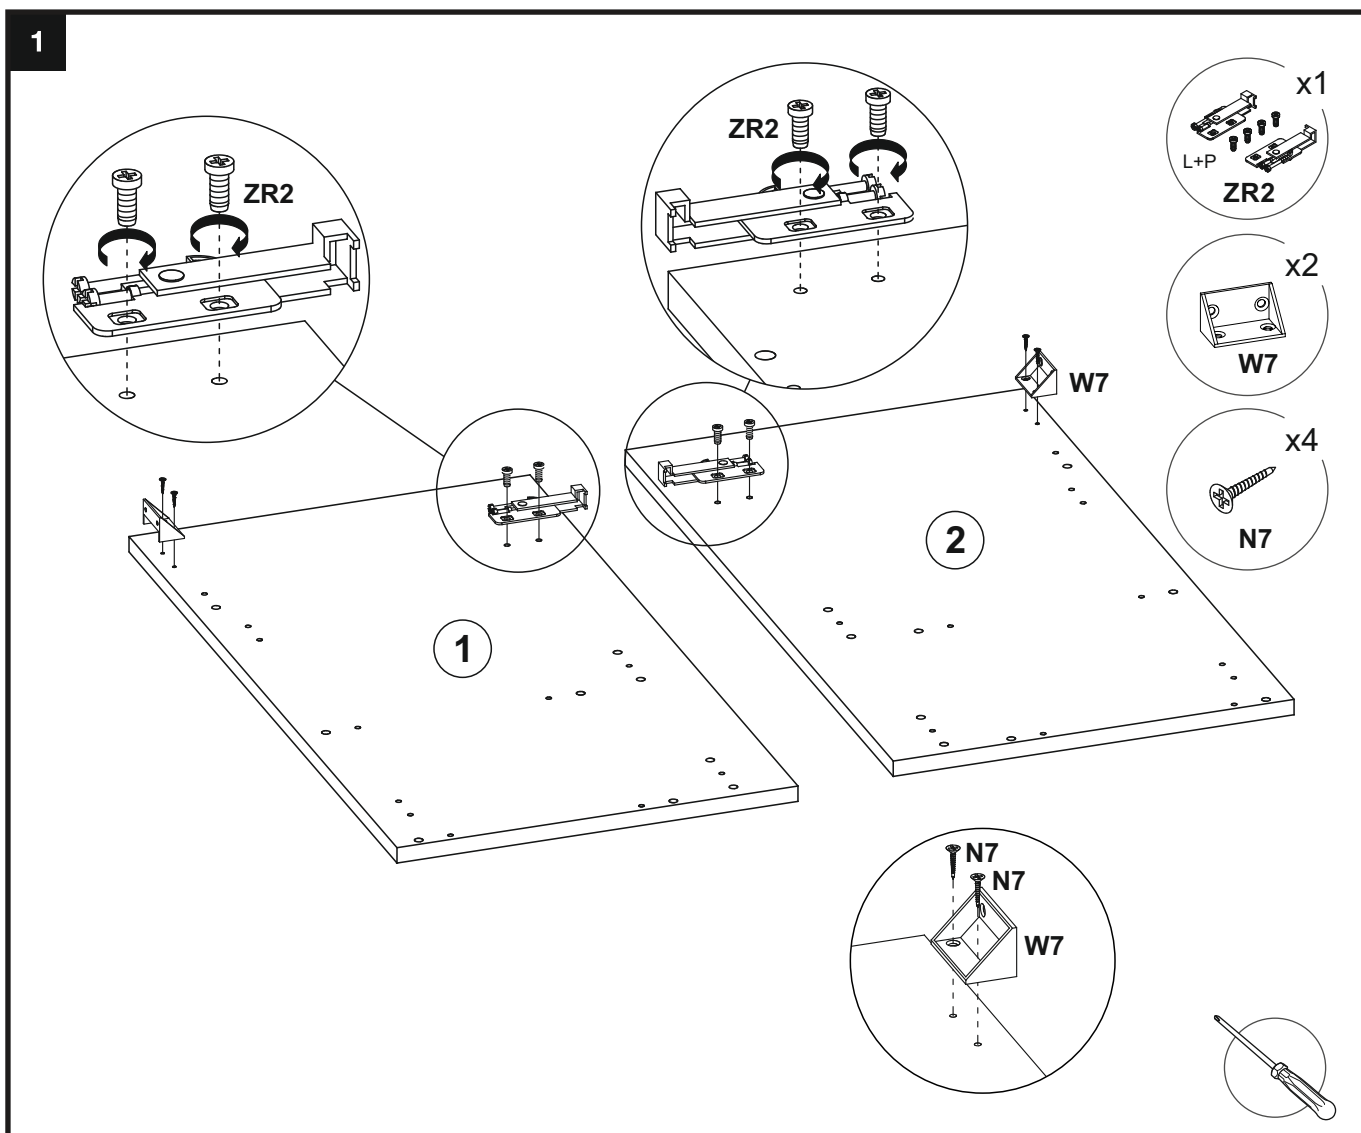

	mm		
	X	Y	Z
858195...	440	740	420

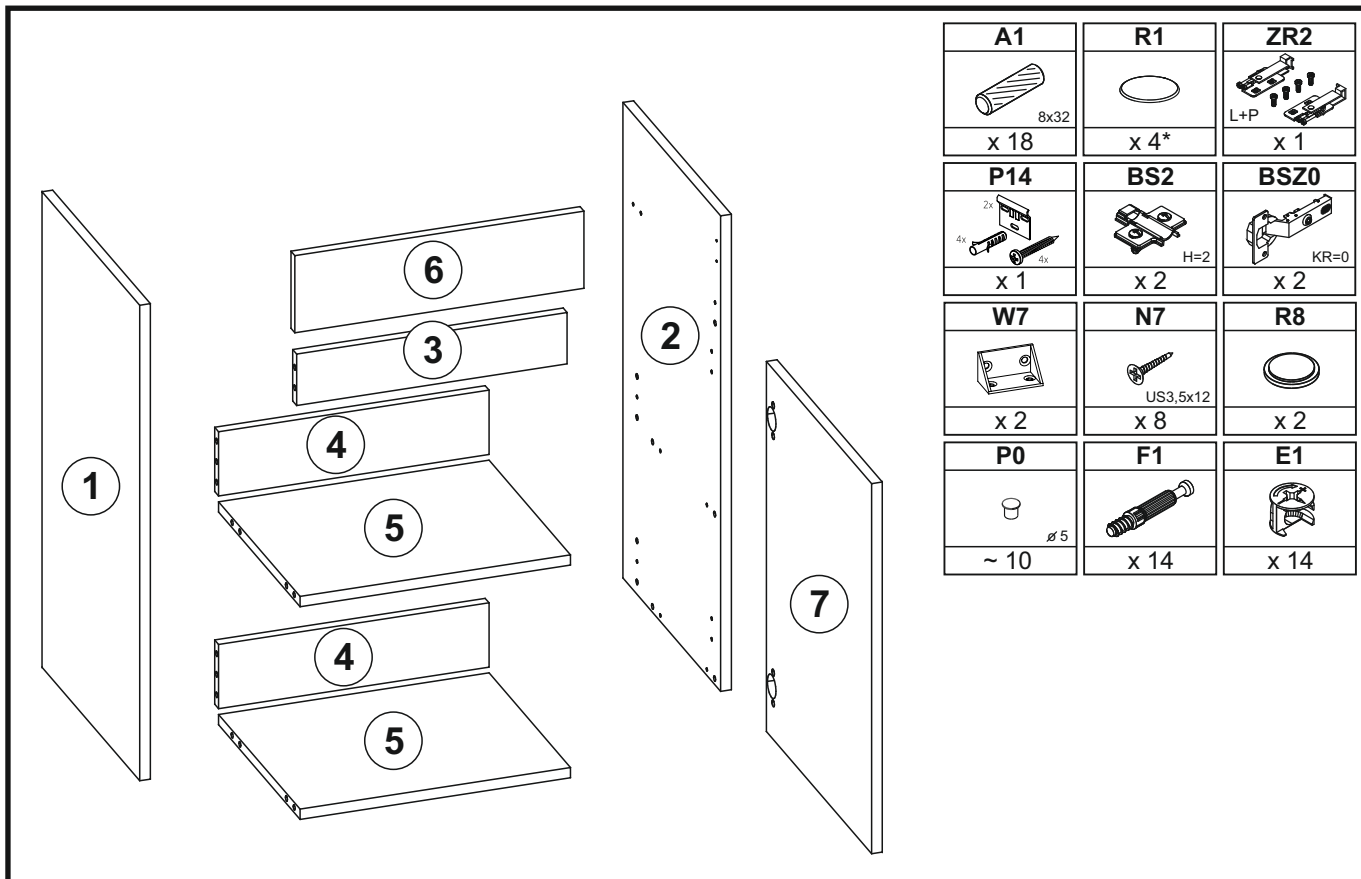

3

Diagram illustrating the assembly of the base structure using 18 screws (A1) and three panels (3, 4, and 5).

Panel 3 (x1) is shown with 2 screws (A1) being installed.

Panel 4 (x2) is shown with 4 screws (A1) being installed.

Panel 5 (x2) is shown with 6 screws (A1) being installed.

Close-up details show the screws (A1) being driven into the panels. A warning symbol (X) indicates that the screws should not be over-tightened.

4

BSZ0

BSZ0

7






4.1

4.2


4.3

BSZ0 x2






5

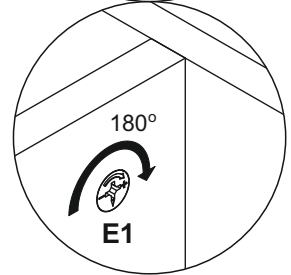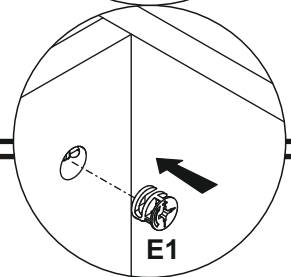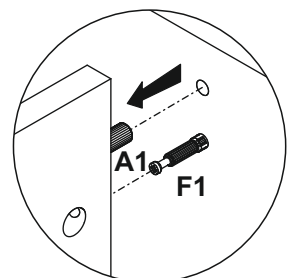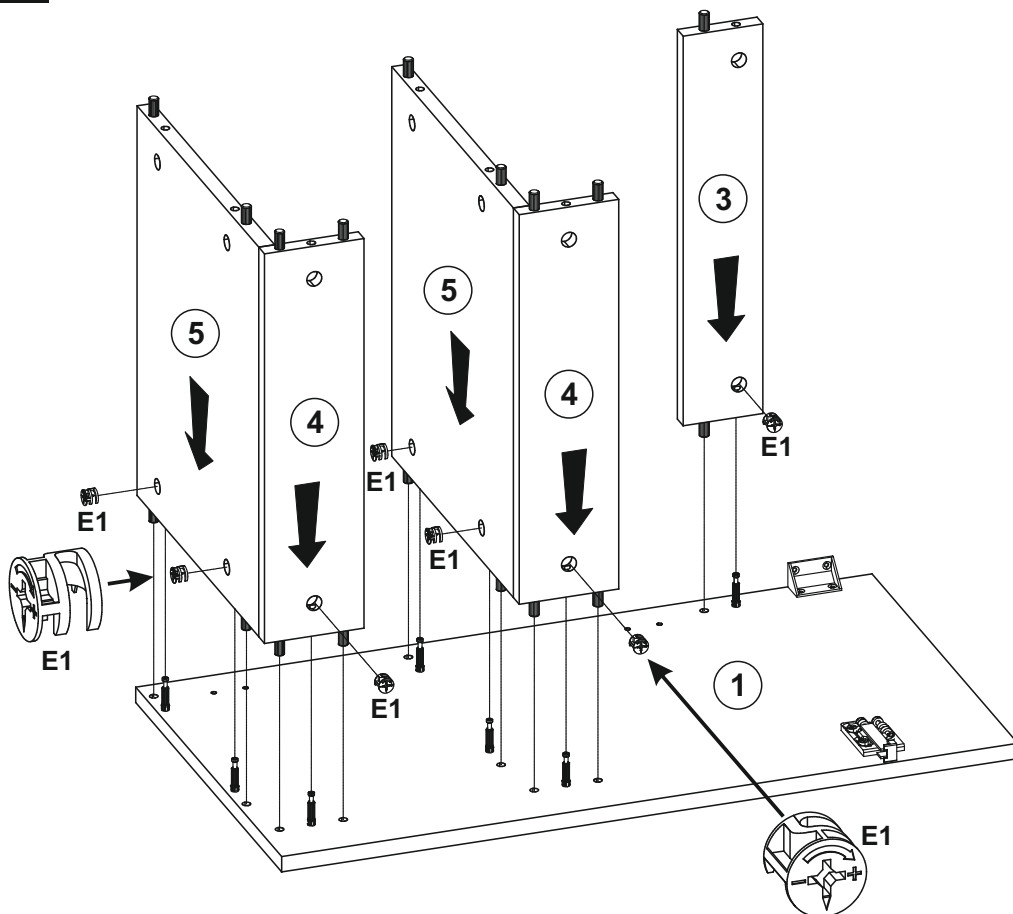



6

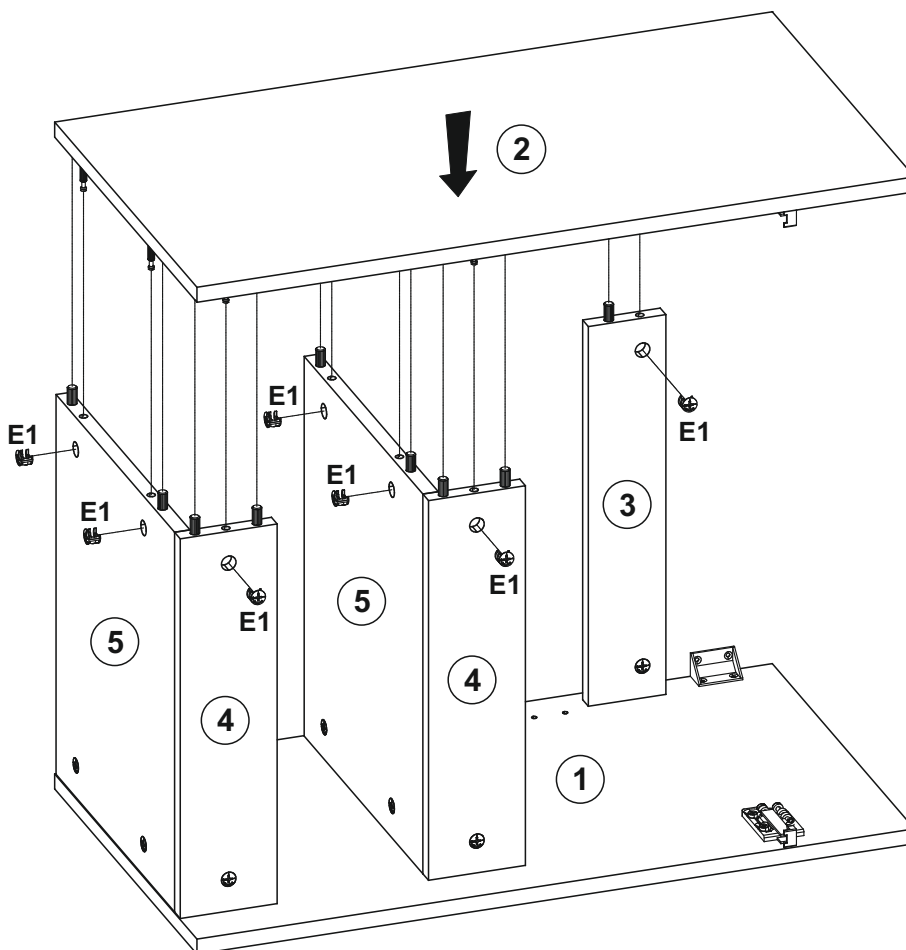





7

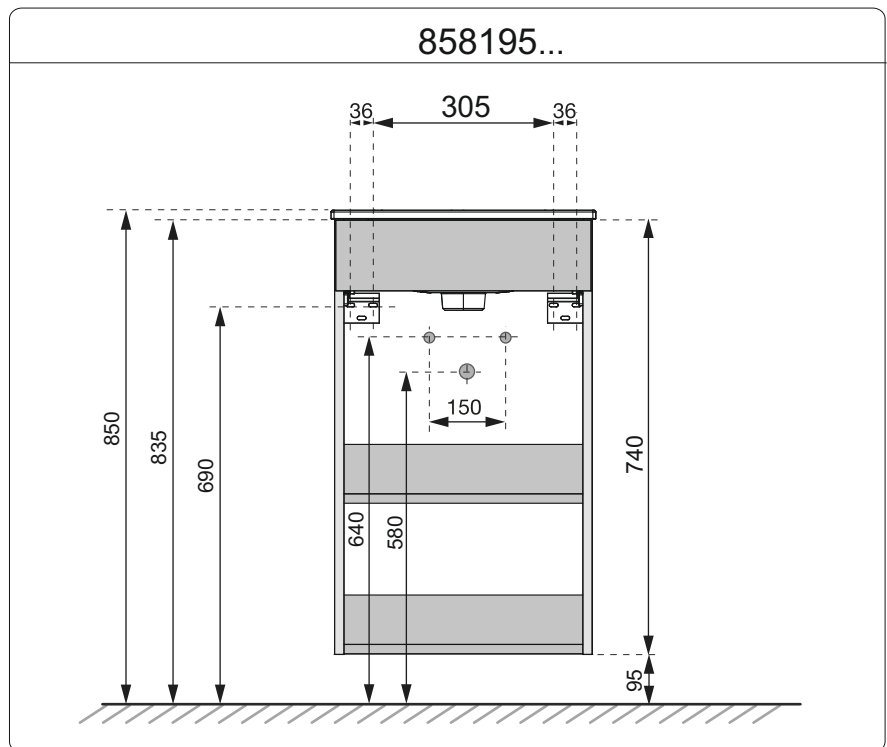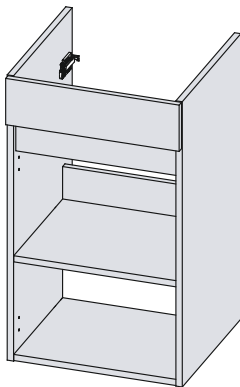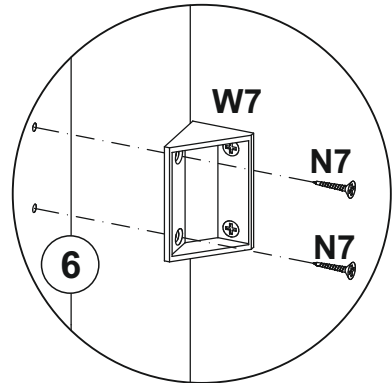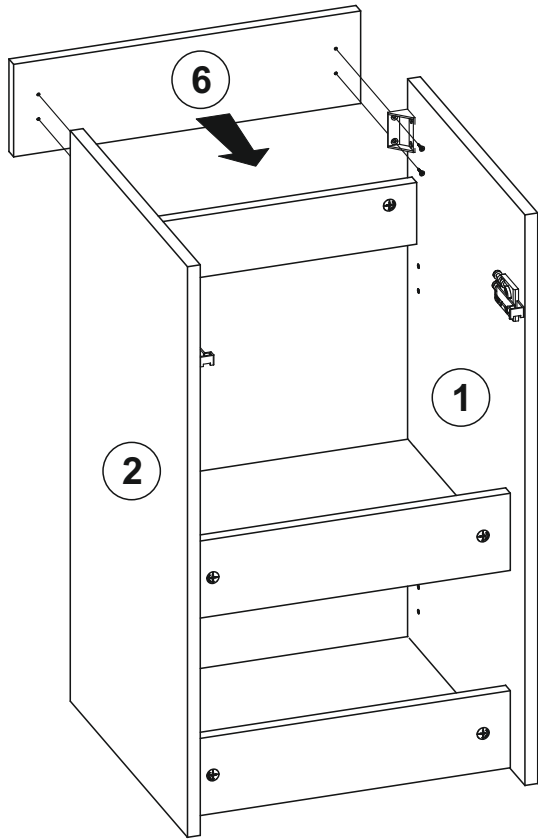







8

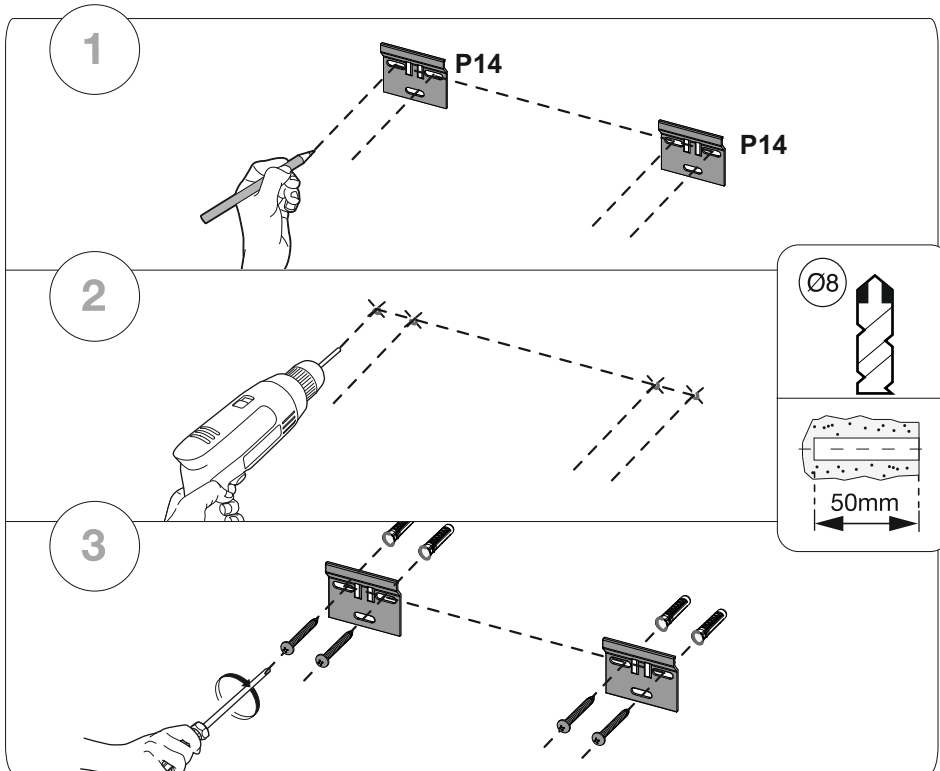








9

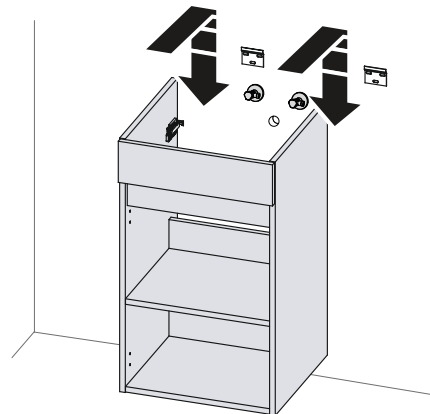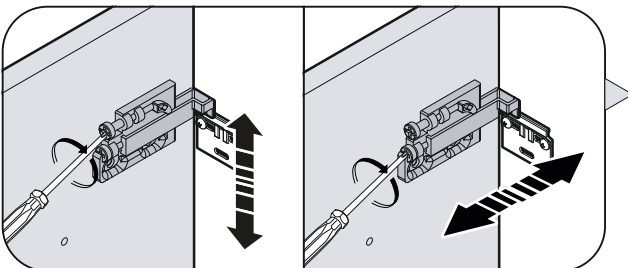









10

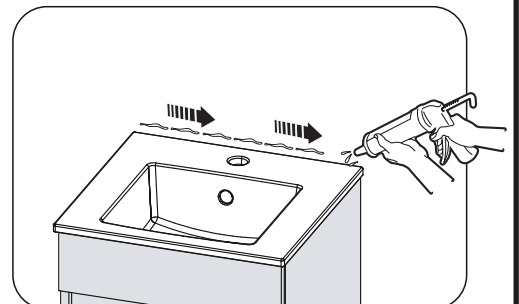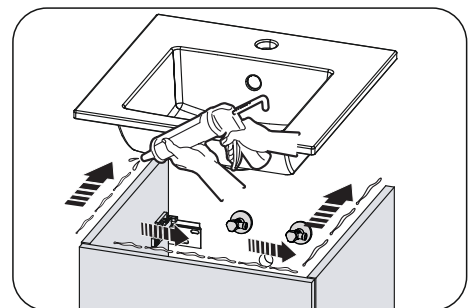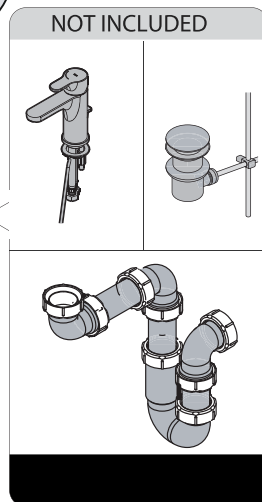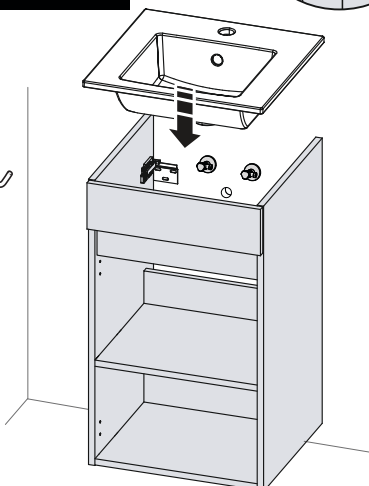
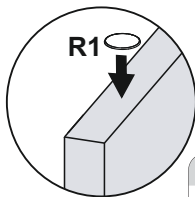
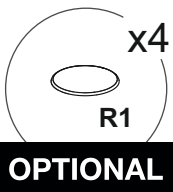


11

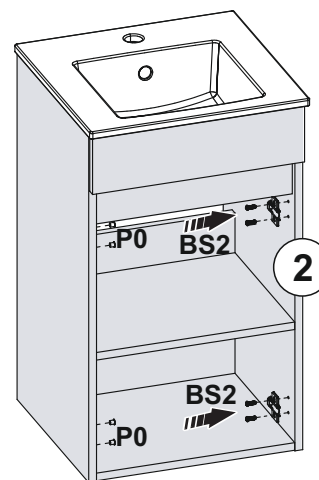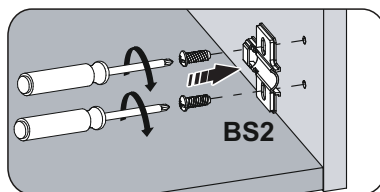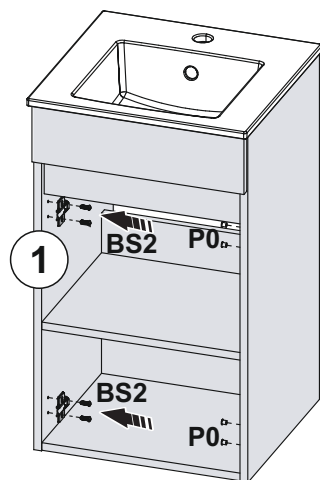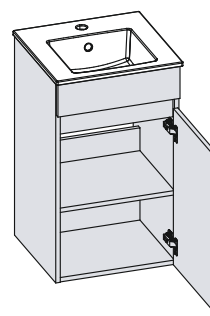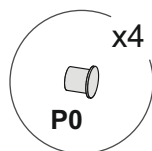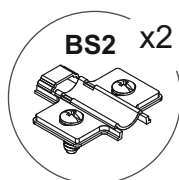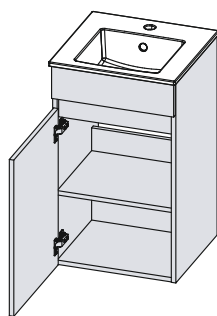

12

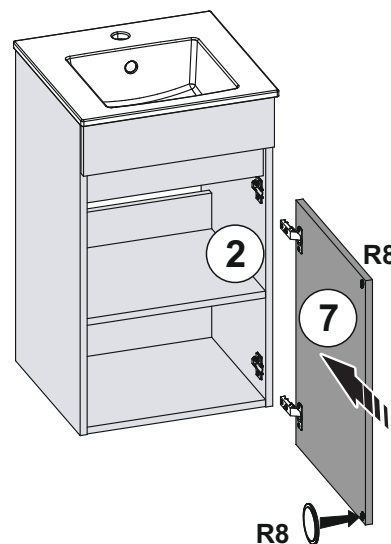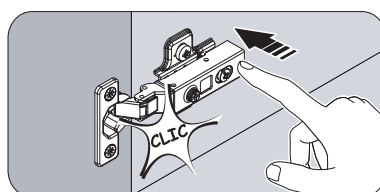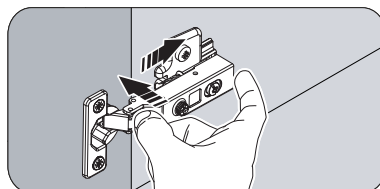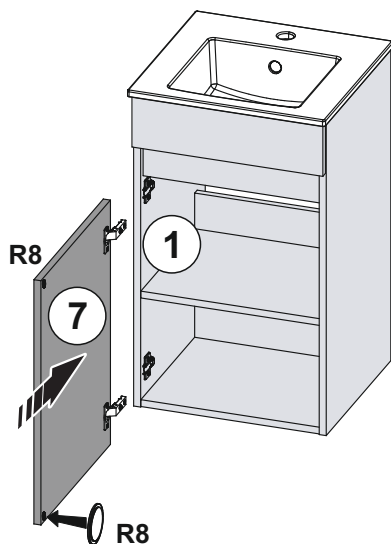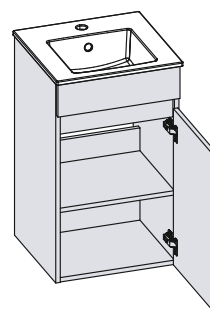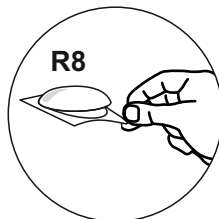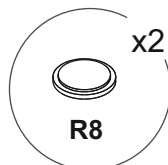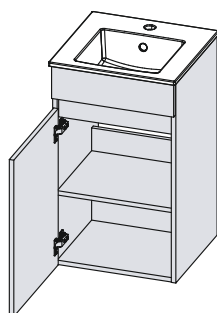

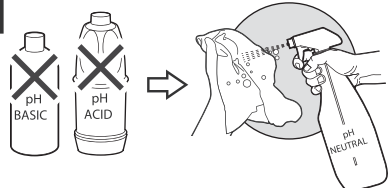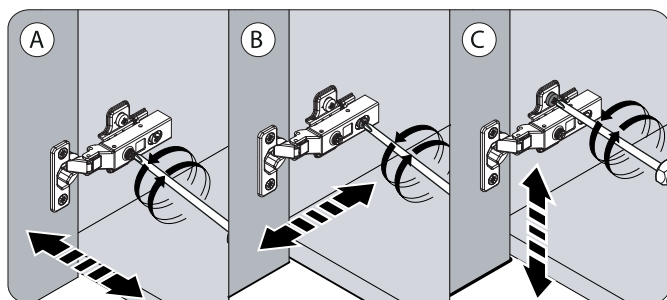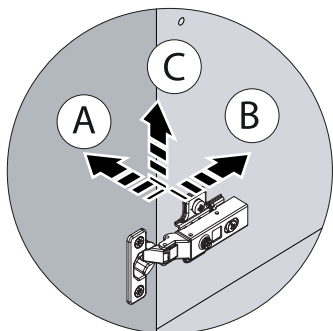

Must be cleaned with NEUTRAL pH cleaning product

